


4WD model

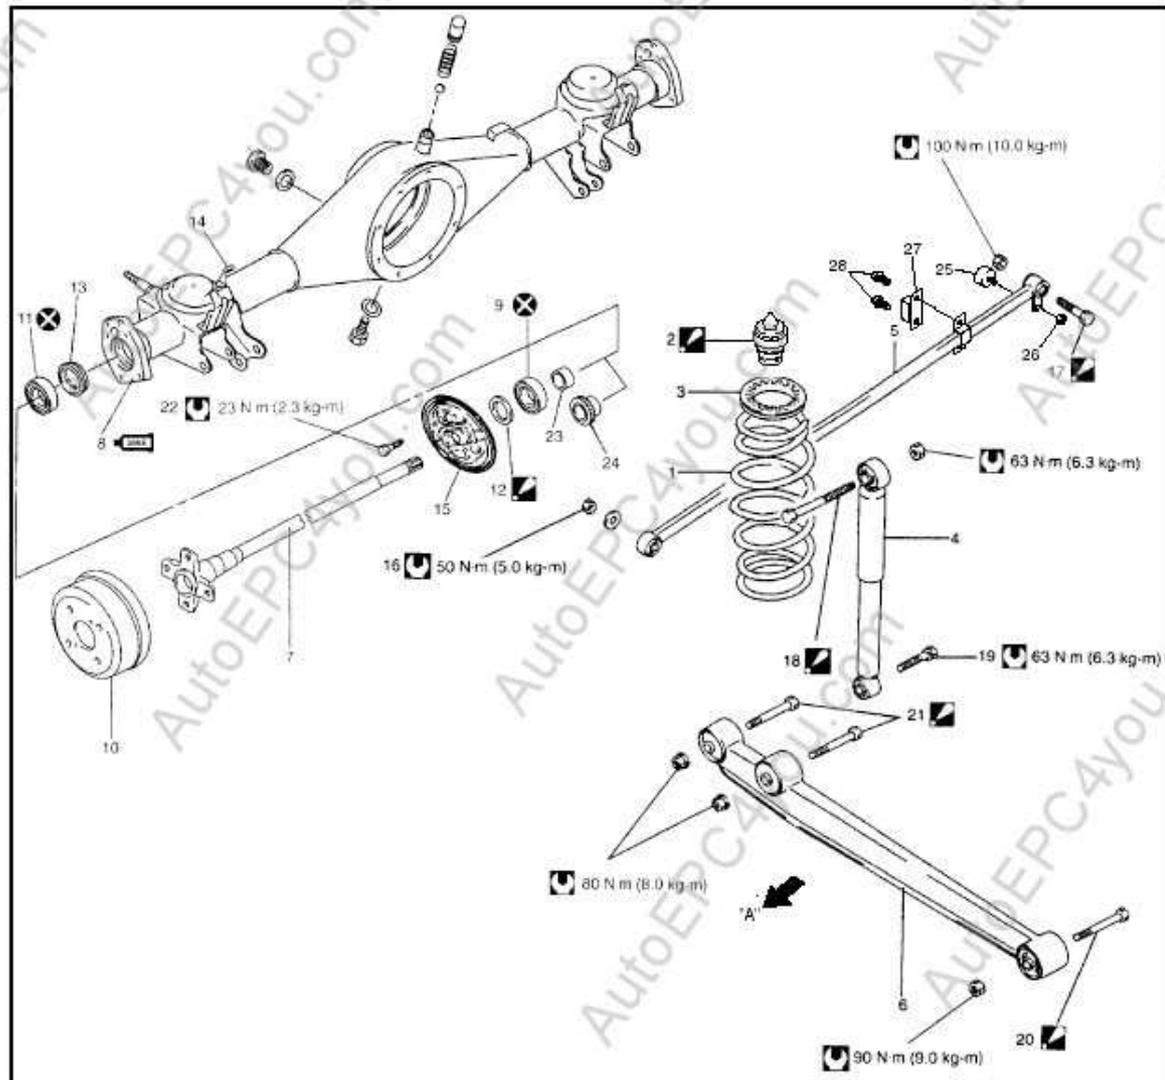

"A": Body outside	11. Oil seal	22. Brake back plate bolt
1. Rear coil spring	12. Spacer : The tapered side of spacer inner diameter directed toward outside (brake drum side).	23. Bearing retainer ring (without ABS)
2. Rear bump stopper : Apply soap water, when installing.	13. Oil seal protector	24. Bearing retainer ring (with ABS)
3. Rear spring upper seat	14. LSPV bracket (only vehicle with LSPV)	25. Lateral rod dumper
4. Rear shock absorber	15. Brake back plate	26. Lateral rod dumper nut
5. Lateral rod	16. Lateral rod axle housing side nut	27. Lateral rod dumper
6. Trailing arm	17. Lateral rod body side bolt : Insert from the direction as shown.	28. Lateral rod dumper bolt
7. Rear axle shaft	18. Shock absorber upper bolt : Insert from vehicle outside.	Tightening torque
8. Rear axle housing : Apply water tight sealant 99000-S1090 to joint of plate and axle housing.	19. Shock absorber lower bolt	Do not reuse
9. Bearing	20. Trailing arm front bolt : Insert from vehicle inside.	
10. Brake drum	21. Trailing arm rear bolt : Insert from vehicle inside.	