

TABLE OF CONTENTS

GENERAL INFORMATION		ENGINE		
GENERAL INFORMATION	0A	ENGINE GENERAL INFORMATION AND DIAGNOSIS	6	0
MAINTENANCE AND LUBRICATION	0B	ENGINE MECHANICAL (M13 ENGINE)	6A1	1
HEATING AND AIR CONDITIONING		ENGINE COOLING	6B	1
HEATER AND VENTILATION	1A	ENGINE FUEL	6C	
AIR CONDITIONING (OPTIONAL)	1B	ENGINE AND EMISSION CONTROL SYSTEM	6E1	3
STEERING, SUSPENSION, WHEELS AND TIRES		IGNITION SYSTEM (ELECTRONIC IGNITION SYSTEM)	6F1	3
STEERING, SUSPENSION, WHEELS AND TIRES	3	CRANKING SYSTEM	6G	3E
FRONT WHEEL ALIGNMENT	3A	CHARGING SYSTEM	6H	3
MANUAL RACK AND PINION	3B	EXHAUST SYSTEM	6K	3
ELECTRICAL POWER STEERING (P/S) SYSTEM	3B1	TRANSMISSION, CLUTCH AND DIFFERENTIAL		
STEERING WHEEL AND COLUMN	3C	MANUAL TRANSAXLE	7A1	3
FRONT SUSPENSION	3D	CLUTCH	7C1	4
REAR SUSPENSION	3E	TRANSFER	7D	4
WHEELS AND TIRES	3F	REAR DIFFERENTIAL	7F	
DRIVE SHAFT AND PROPELLER SHAFT		ELECTRICAL SYSTEM		
FRONT DRIVE SHAFT	4A	BODY ELECTRICAL SYSTEM	8	5
PROPELLER SHAFTS	4B	Wiring Diagram	8A	5
BRAKE SYSTEM		LIGHTING SYSTEM	8B	5
BRAKES	5	INSTRUMENTATION/DRIVER INFORMATION	8C	5
BRAKES PIPE / HOSE / MASTER CYLINDER	5A	WINDOWS, MIRRORS, SECURITY AND LOCKS	8D	
FRONT BRAKE	5B	IMMOBILIZER CONTROL SYSTEM	8G	
PARKING AND REAR BRAKE	5C	BODY SERVICE		
ANTILOCK BRAKE SYSTEM (ABS)	5E	RESTRAINT SYSTEM		
		RESTRAINT SYSTEM	10	
		AIR BAG SYSTEM	10B	

NOTE:

The screen toned Section 8A is in **Wiring Diagram Manual** mentioned in FOREWORD of this manual