


ELECTRONIC CONTROL SYSTEM COMPONENT LOCATION

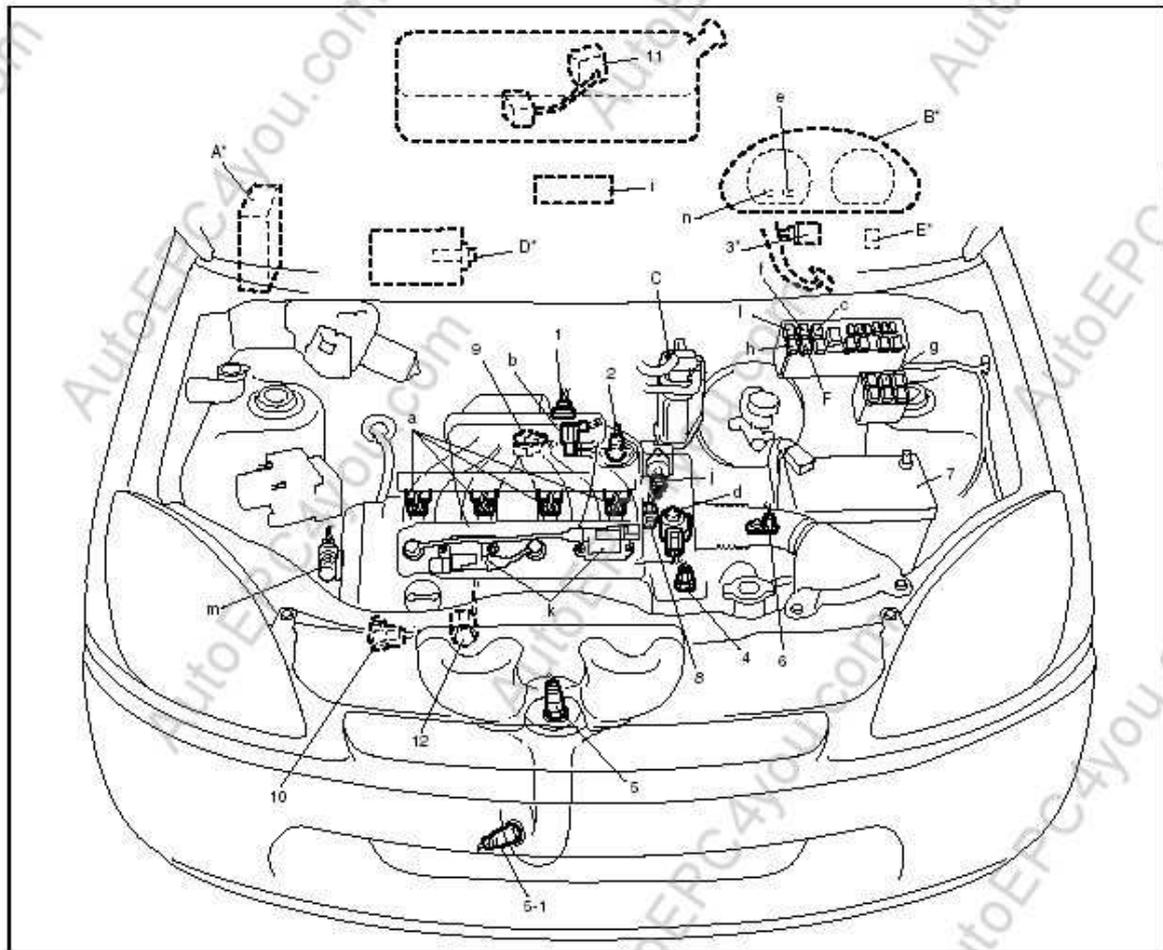

INFORMATION SENSORS	CONTROL DEVICES	OTHERS
1. MAF and IAT sensor	a. Fuel injector	A. ECM
2. TP sensor	b. EVAP canister purge valve	B. Combination meter
3. Stop lamp switch	c. Fuel pump relay	C. EVAP canister
4. ECT sensor	d. EGR valve	D. A/C evaporator outlet air temp. sensor (if equipped)
5. Heated oxygen sensor-1	e. Malfunction indicator lamp	E. Data link connector
5-1. Heated oxygen sensor-2	f. A/C condenser fan relay No.1 (if equipped)	F. A/C compressor relay (if equipped)
6. VSS	g. A/C condenser fan relay No.2 (if equipped)	
7. Battery	h. Radiator fan relay	
8. CMP sensor	i. Fuel cost meter	
9. MAP sensor	j. IAC valve	
10. CKP sensor	k. Ignition coil assembly (with ignitor)	
11. Fuel level sensor	l. Main relay	
12. Knock sensor	m. Oil control valve	
	n. Immobilizer indicator lamp	

NOTE:

Above figure shows left-hand steering vehicle. For right-hand steering vehicle, parts with (*) are installed at the opposite side.